
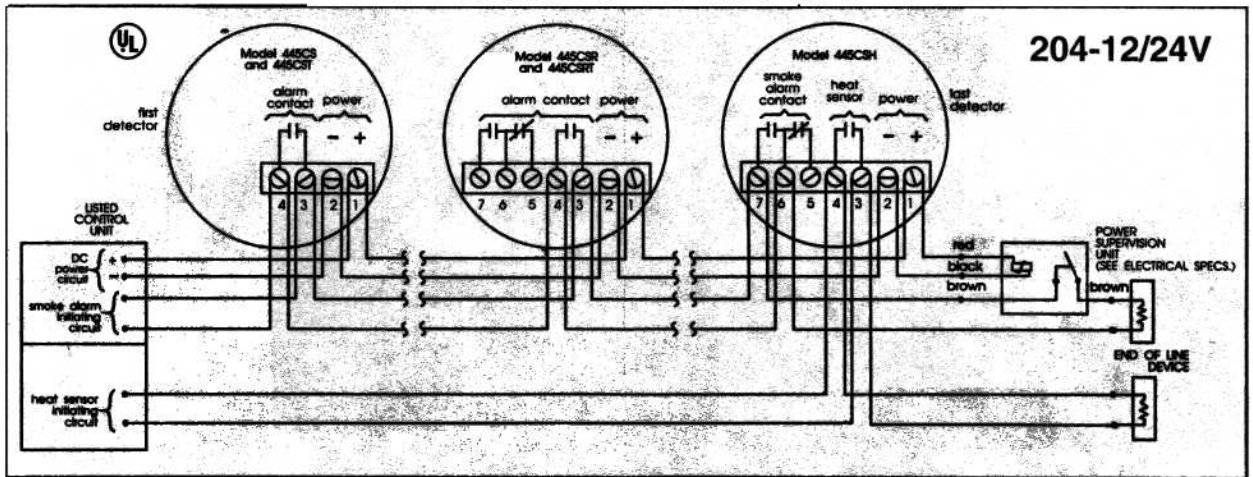
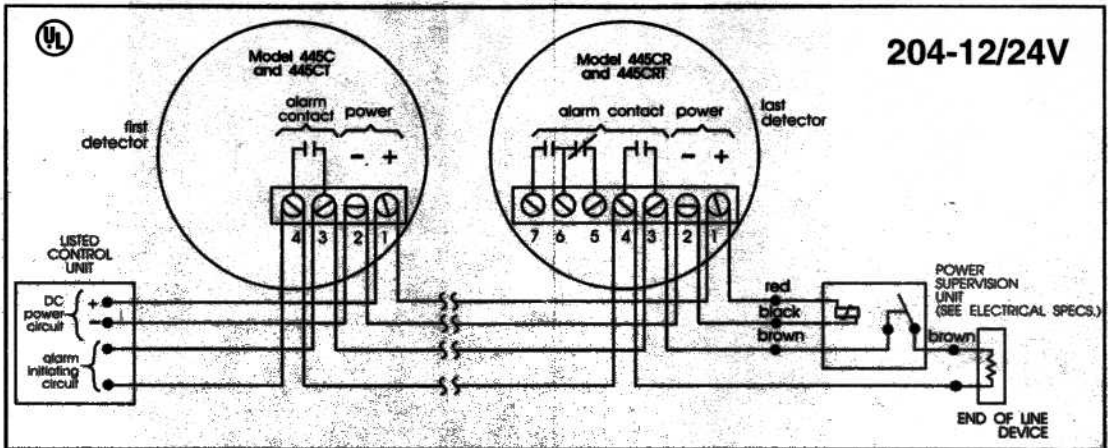


# Installation Instruction for Power Supervision Module

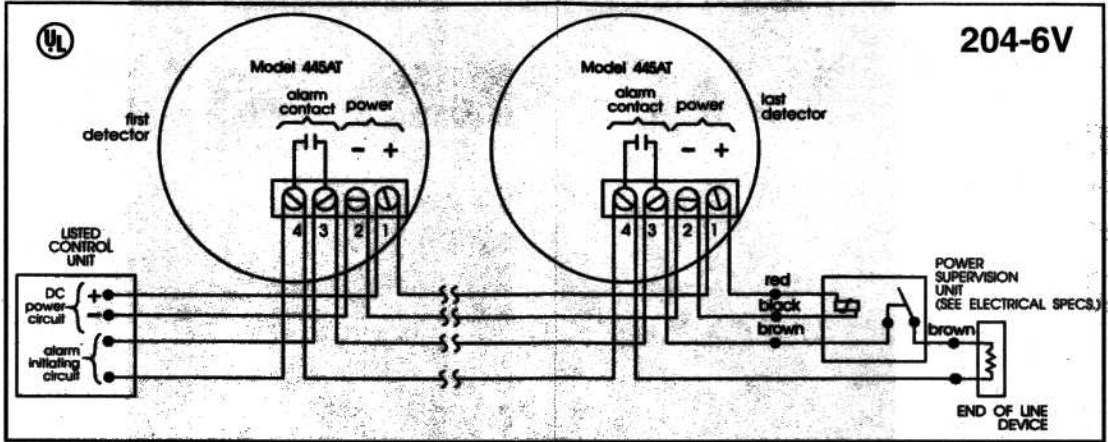

## ELECTRICAL SPECIFICATIONS

### Power Supervision Unit 204 - 6V

Operating Voltage 5.1 - 15 VDC  
 Operating Current 33 mA @ 6 VDC; 66 mA @ 12 VDC  
 Contact Rating (resistive) 2A @ 26 VDC or 115 VAC

### Power Supervision Unit 204 - 12/24V

Operating Voltage 8.5 - 33 VDC  
 Operating Current 14 mA @ 12 VDC; 28 mA @ 24 VDC  
 Contact Rating (resistive) 2 A @ 26 VDC or 115 VAC

## INSTALLATION INSTRUCTIONS

1. Connect brown initiating leads as indicated such that the end of line device is connected in series with the power supervising contact.
2. Connect appropriate control leads as shown. Red incoming and red from module to terminal 1. Black incoming and black from module to terminal 2.
3. Neatly dress wires and power supervision unit into junction box.
4. Mount detector according to manufacturers installation instructions.

**ESL**

**Sentrol, Inc.**  
 Corporate Headquarters  
 12345 SW Leveton Drive  
 Tualatin, OR 97062  
 503-692-4052

U.S. & Canada: 800-547-2556  
 Technical Support: 800-648-7424

Sentrol, Inc. reserves the right to  
 change specifications without notice.  
 ©1994 Sentrol, Inc.

Printed on recycled paper

E-983-10/92  
 10258 REV. B